

11. Bend the locking tang tab in place.
12. Replace grease/hub cap.
13. Test hub with wheel mounted for excessive play or tightness, readjust if required.

Bearing Reference Chart

	Spindle Outside Dia. (O.D.)	Outer Hub I.D.	Outer Bearing Cone No.	Inner Bearing Cone No.	Outer Cup No.	Inner Cup No.
Straight Spindle	3/4"	1.784	LM11949	LM11949	LM11910	LM11910
	1"	1.980	L44643	L44643	L44610	L44610
	1-1/16"	1.980	L44649	L44649	L44610	L44610
	1-1/4"	2.328	LM67048	LM67048	LM67010	LM67010
	1-3/8"	1.980	L68149	L68149	L68111	L68111
Stepped Spindle	1-1/16" x 3/4"	1.781	LM11949	L44649	LM11910	L44610
	1-1/4" x 3/4"	1.781	LM11949	LM67048	LM11910	LM67010
	1-3/8" x 1-1/16"	1.980	L44649	L68149	L44610	L68111
	1-3/8" x 1-1/16"	1.980	L44649	L68149	L44610	L68110

