



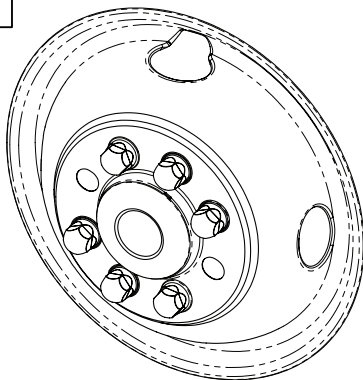
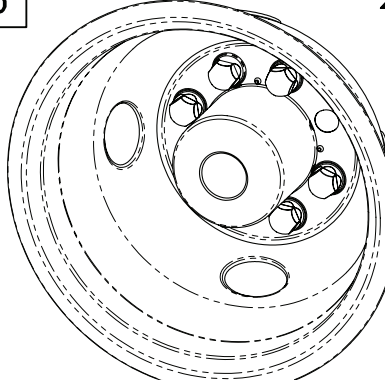
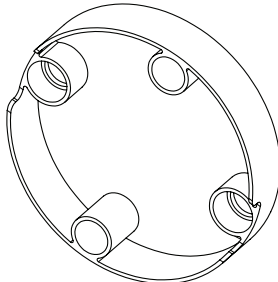

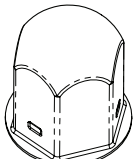
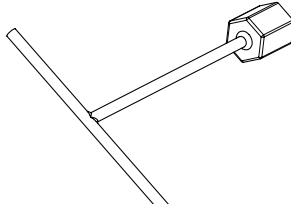

# GDG01

16" SS SIMULATOR SET

**Phoenix<sup>TM</sup> USA, Inc.**

INSTALLER: PLACE THESE INSTRUCTIONS IN  
THE CAB WITH THE VEHICLE OWNER'S MANUAL

All Phoenix<sup>TM</sup> USA, Inc. products are warranted for suitability and workmanship, but should be inspected on arrival to ensure accuracy. We do not warranty any products that have been incorrectly installed, repaired, altered or otherwise misused. Customer is responsible for all freight charges on warranty returns. Note: Phoenix<sup>TM</sup> USA, Inc. Stainless Steel Wheel Simulator products are protected under one or more of the following Patents: #4,932,724; #5,096,263; #5,193,884; #5,205,614; #5,205,616; #5,277,478; #5,286,093; #5,645,324; #5,669,672; #5,676,430; #5,695,257; #5,722,735; #5,890,773; #6,152,537; #6,511,132; #7,156,470; #7,467,829; #D536,291; #D538,726; #D538,727; #D566,028 other patents pending.

<div>A</div> <div></div> <div>FRONT WHEEL LINER</div>	2X	<div>B</div> <div></div> <div>REAR WHEEL LINER</div>	2X	<div>C</div> <div></div> <div>SPACER</div>	4X		
<div>D</div> <div></div> <div>TUBULAR STUD EXTENDER</div>	8X	<div>E</div> <div></div> <div>JAM NUT \ LUG NUT COVER COMBINATION</div>	8X	<div>F</div> <div></div> <div>INSTALLATION TOOL</div>	1X	<div>G</div> <div></div> <div>2" EMBLEM</div>	4X

1. Do not remove original equipment lug nuts. Install the Spacer over lug nuts as shown until Spacer rests against lug nut washer. Be sure Spacer is installed to allow proper valve stem and hand hole alignment of the Front Wheel Liner.
2. Install the Tubular Stud Extenders onto the lug nuts as shown. Tighten tubular Stud Extenders with included Installation Tools.
3. Install the Front Wheel Liner over the Tubular Stud Extenders. Allow proper alignment of the Valve Stem and Hand Holes.
4. Install the Jam Nut/Lug Nut Covers onto the Tubular Stud Extender exposed through the Front Wheel Liner. Tighten Jam Nut/Lug Nut Covers with Installation Tool.
5. Apply the Hub Center Emblem to Complete the Installation.
6. Repeat Steps 1 through 5 of wheel liner installation for other wheel positions. When finished place the Installation Tool in the vehicle glove Box for future use.

