


INSTALLATION INSTRUCTIONS: READ COMPLETELY BEFORE STARTING!

OUTER TIE DOWN INSTALL FOR 1-PLACE, 2-PLACE & 4-PLACE WATERCRAFT TRAILERS

NOTE: IF YOU HAVE A TRAILER MODEL NEWER THAN 2014 MODEL YEAR, GO TO STEP 3.

- 1) REMOVE TAIL LIGHTS AND GROMMETS.
- 2) MARK HOLE LOCATIONS AS SHOWN IN DETAIL -A- AND DRILL TWO 7/16 HOLES THRU BACK WALL OF REAR CROSSMEMBER. NOTE: USE CAUTION WHEN DRILLING TO AVOID CHAFING WIRE HARNESS INSULATOR.
- 3) SECURELY ATTACH TIE DOWNS USING HARDWARE, AND BRACKET, AS SHOWN IN DETAIL -B-. THIS SHOULD BE ORIENTED TO CREATE A STRAIGHT LINE PULL TO THE CRAFT EYELET.
- 4) APPLY NEW REFLECTIVE "TRITON X" DECAL.


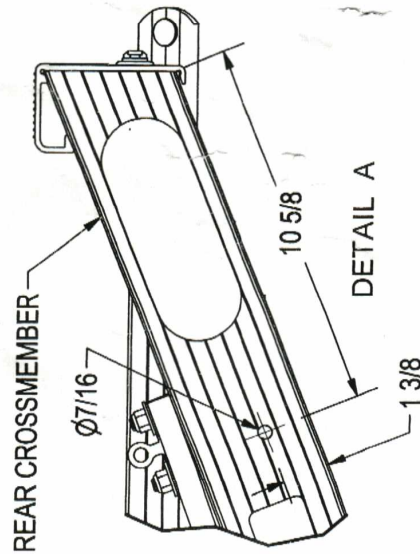


NOTE: SOME COMPONENTS ARE NOT USED FOR OUTER INSTALLATION ONLY.

INSTALLATION INSTRUCTIONS: READ COMPLETELY BEFORE STARTING!

INNER TIE DOWN INSTALL FOR 2-PLACE & 4-PLACE WATERCRAFT TRAILERS

- 1) MARK HOLE LOCATION EVEN WITH INSIDE EDGE OF ADJUSTABLE BUNK PAD AND $1 \frac{3}{8}$ UP FROM THE BOTTOM OF THE REAR CROSSMEMBER AS SHOWN IN DETAILS -A- & -C-.
- 2) DRILL TWO 7/16 HOLES THRU BOTH WALLS OF REAR CROSSMEMBER. NOTE: USE CAUTION WHEN DRILLING TO AVOID CHAFING WIRE HARNESS.
- 3) SECURELY ATTACH TIE DOWNS USING HARDWARE, AND BRACKET, AS SHOWN IN DETAIL -C-. THIS SHOULD BE ORIENTED TO CREATE A STRAIGHT LINE PULL TO THE CRAFT EYELET.

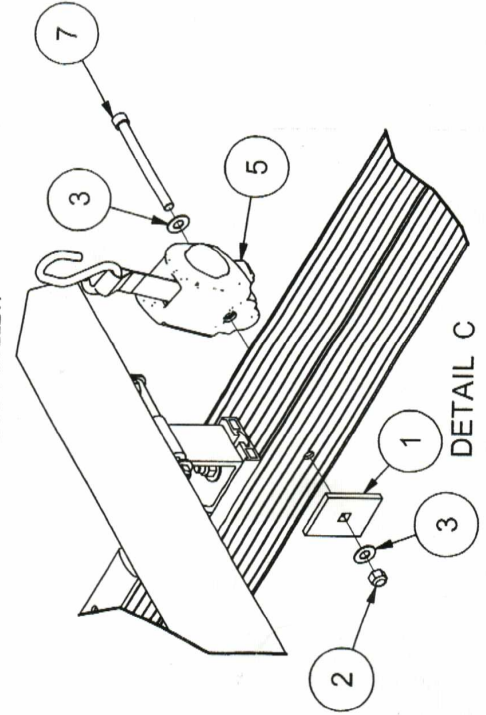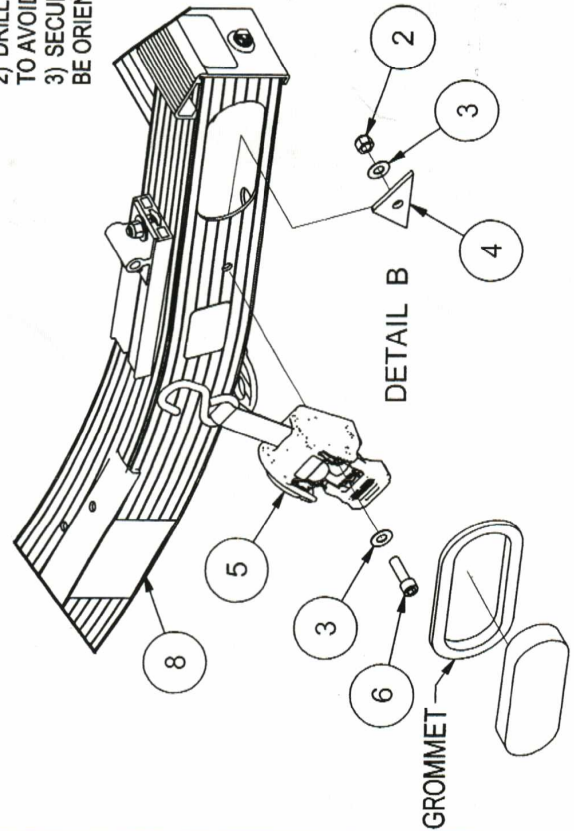

TRITON Customer Instruction Sheet

KIT NO.: 16350

DESCRIPTION

RETRACTABLE TIE DOWN

DRAWN BY:

L. Wagner

DATE:

4-18-13

DRAWING NO.:

16335

Parts List

ITEM	P/N	DESCRIPTION	QTY
1	05508	LOCKING PLATE, BOW	2
		SUPPORT-WC (INNER ONLY)	
2	05515	NUT, HEX 3/8-16 LOC SS	2
3	05516	WASHER, FLAT 3/8 SS	4
4	16314	BRACKET, CORNER ADJUST	2
5	16333	TIE DOWN, 1" RETRACTABLE (PAIR)	1
6	16708	SCREW, SHCS 3/8-16 x 1 1/4 SS	2
7	16709	SCREW, SHCS 3/8-16 x 4 1/2 SS (INNER ONLY)	2
8	16730	DECAL, TRITON X	1